

CONTENTS

[Notices](#)

[Important Points](#)

[Driving](#)

[Maintenance](#)


[Minor Repairs](#)

[Miscellaneous Information](#)

[Service-station Reminder](#)

[ALPHABETICAL INDEX](#)

CITROËN

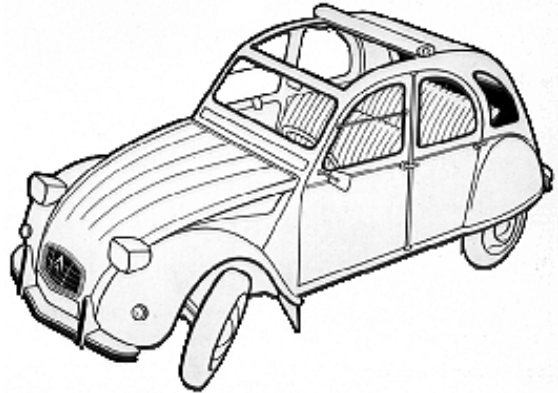

2 CV4 - 2 CV6

OWNER'S MANUAL

**07516
JULY 1975**


**AZ-KB AZ-KA
2 CV4 2 CV6**

NOTICES

Positions are described as Right-Hand (RH) or Left-Hand (LH), as seen by a person standing behind the car and looking forward towards the bonnet (hood).

Descriptions of the various items fitted to the car cover standard fittings and optional extras. The inclusion of a description does not therefore imply that the item described is fitted to all models for any particular model.

CITROËN 

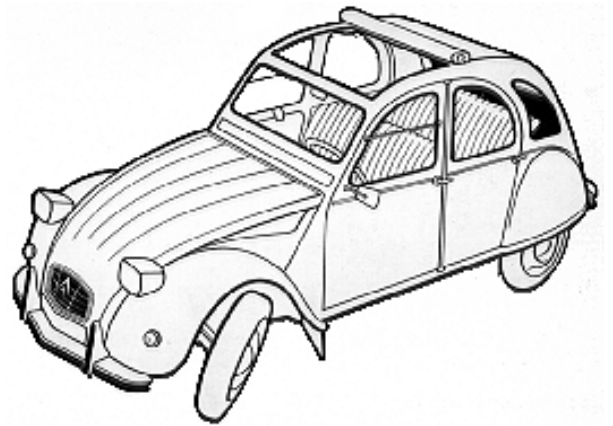

2 CV4 - 2 CV6

OWNER'S MANUAL



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

IMPORTANT POINTS

RUNNING-IN

During the first 1,200 mi (2,000 km): Keep a little below the speed limits indicated by the red marks on the speedometer.

FIRST-SERVICE

At 600 mi (1,000 km): by any Citroën Dealer.

LEVELS

Before setting out on a long journey, check: The engine oil level; the level of the brake fluid and top up if necessary.

DRAINING

Every 3,000 mi (5,000 km): Engine sump - drain and refill
Every 12,000 mi (20,000 km): Gearbox - change the oil

WARNING LAMPS

On "2 CV6", pay attention to the red warning lamp, (engine oil pressure). If it lights up while driving, stop immediately.

SIGNALS/VISIBILITY

Always keep in your vehicle: complete set of spare bulbs; set of fuses (10 & 15 amps).

TYRES/TIRES

Check inflation pressures regularly.
Changing a wheel: Tools and spare wheel in boot (trunk).
From the very beginning make yourself acquainted with the handling operations specified in the Tyre (tire) changing section.

Model	Michelin	Front	Rear	Spare
2 CV4	125-15X	1.4 bar 20 psi	1.8 bar 26 psi	2 bar 29 psi
2 CV6	125-15X	1.4 bar 20 psi	1.8 bar 26 psi	2 bar 29 psi

In order to ensure a longer life for your vehicle, and, for your safety, "Citroën" advises you to adhere to these most important points, systematically.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

This first section contains all you need to know about driving your car and taking advantage of the comfort it offers: the panel instruments are all described here, so that you can find out the meaning of their signals with a minimum of effort, should the need arise.

We also advise you to read here before taking the car on the road for the first time.

DRIVING

Opening and locking:
Doors, Boot, Bonnet

Driving Position:
Controls and accessories (LH)
Controls and accessories (RH)
Dashboard instruments
Seats, rear-view mirrors, seat belts

Starting:
Anti-theft, ignition, starter


Gears, clutch, brakes

Signals and visibility:
Lights, signals, windscreen wipers/
washer

Air conditioning:
Ventilation, heating, de-misting

Comfort:
Folding canvas hood
Accessories

CITROËN 

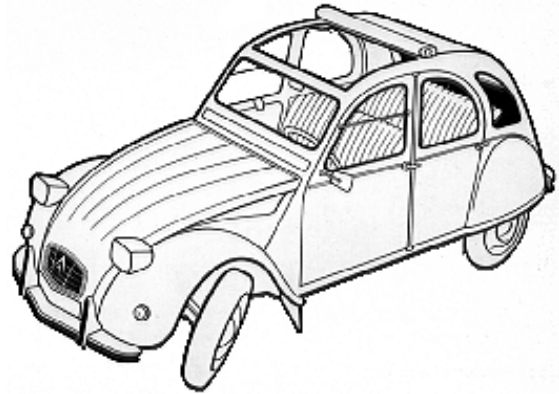

2 CV4 - 2 CV6

OWNER'S MANUAL

07516
JULY 1975

AZ-KB AZ-KA
2 CV4 2 CV6



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MAINTENANCE

This section deals with the small points which are essential to ensure the good condition of your car: checking levels, keeping and eye on the tyres, washing the bodywork ...

Other maintenance operations, such as greasing, oil changes, adjustments - which the Citroën network will competently carry out for you, through its special Service Stations - form the subject of the "Maintenance Guide", which was supplied with the vehicle when originally delivered.

MAINTENANCE

Levels:


Oil, Brake Fluid - Checks and Topping Up

Mechanical and Electrical

Bodywork

Interior

CITROËN 

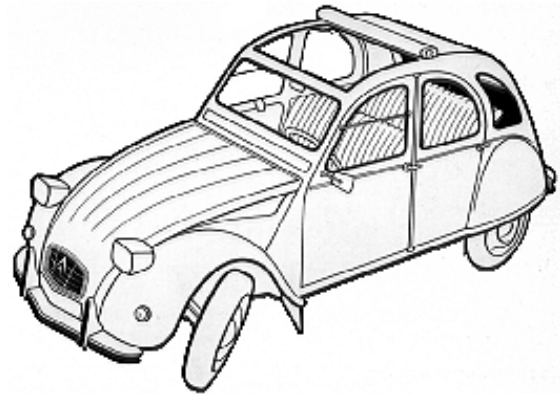

2 CV4 - 2 CV6

OWNER'S MANUAL

**07516
JULY 1975**

**AZ-KB AZ-KA
2 CV4 2 CV6**



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

You should consult this section should any difficulties, such as a puncture or a sparking plug which needs changing, arise.

If, however, it concerns a malfunction indicated by one of the instruments, you should go [here](#).

MINOR REPAIRS

[Replacing a Wheel](#)

[Adjusting the Headlamps](#)

[Replacing a Bulb](#)

[Replacing a Fuse](#)


[Replacing the Battery](#)

[Replacing a Sparking Plug](#)

[Using the Starting Handle](#)

[Towing the Car](#)

CITROËN 

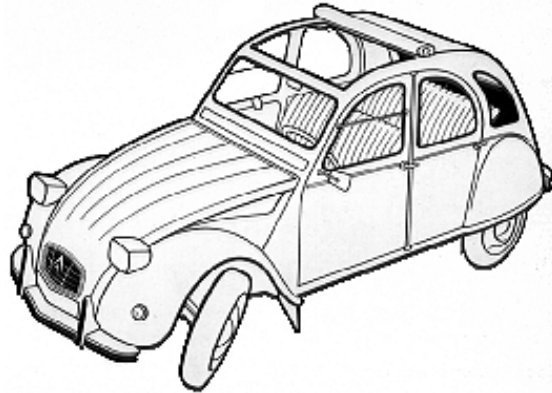

2 CV4 - 2 CV6

OWNER'S MANUAL

**07516
JULY 1975**

**AZ-KB AZ-KA
2 CV4 2 CV6**



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MISCELLANEOUS INFORMATION

Your attention is particularly drawn to the sections entitled "Running-in" and "Servicing and Guarantee".

If you are travelling abroad, the translations into 4 languages of the servicing data will be of use to you at service-stations.

These sections will also enable you, if you so desire, to learn more about your car by referring to the section entitled "General Technical Specifications".

MISCELLANEOUS

Running-in, servicing, guarantee

Driving and running cost

Towing a trailer


Vehicle identification

Replacement parts

Travelling abroad

General Technical Specifications

CITROËN 

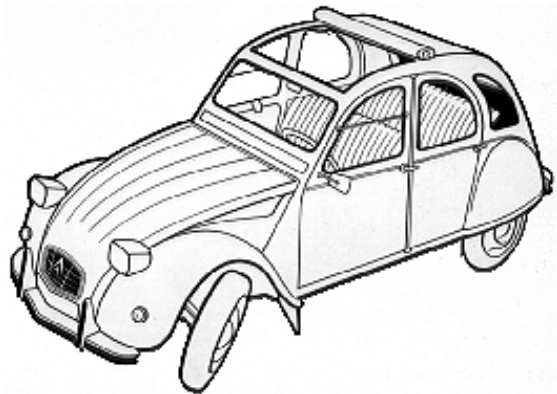

2 CV4 - 2 CV6

OWNER'S MANUAL

07516
JULY 1975

AZ-KB AZ-KA
2 CV4 2 CV6



[[Contents](#)] [[Notices](#)] [[Important Points](#)] [[Driving](#)] [[Maintenance](#)] [[Minor Repairs](#)] [[Miscellaneous Information](#)]

REMINDER FOR SERVICE-STATION

For German, French, Italian, or Spanish, click [HERE](#).

REMINDER FOR SERVICE-STATION	
Tyres:	MICHELIN 125-15 X Pressure = 1.4 bar (20 psi) at the front 1.8 bar (26 psi) at the rear 2 bars (29 psi) on spare wheel Other fittings: See HERE .
Fuel:	Super (Premium 4-stars, 97-99 octane) Capacity: 20 litres (4.5 imp. pints)
Engine oil:	TOTAL "GT 20 W 40" or "GTS 20 W 50" oil In very cold countries: TOTAL "GT 10 W 30" or "GTS 10 W 30" oil
Sump capacity:	On "2 CV 4" = 2.2 Litres (3.9 imp. pints) On "2 CV 6" = 2.3 Litres (4 imp. pints)
Gearbox oil:	TOTAL extreme pressure "SAE 80" oil (capacity 0.9 litre (1 1/2 Imp. pints)
General lubricant:	"TOTAL Multis"
Hydraulic brake system:	TOTAL FLUID "70 R3" - If this product is not available, use NFR12640 "S" or "V" or SAE J 1703a (capacity 0.5 Litres - 7/8 imp. pint)
Windscreen washer:	Water, to which may be added: - in any season: a product like "Stop-Clair", "Clearalex", "Screen-Clear". etc. -in Winter: a product like "Stop-Gel"
Battery:	12 V - 125/25 Ah. CEI (or 150/30 Ah. CEI) Distilled water (do not add acid)
Sparkling Plugs:	AC 42 F - Bosch W 255 T1 - Champion L 85 - Eyquem 755 - Marchal 35 - Marelli CW 7 N BT Electrode gap = 0.65-0.75 mm
Bulbs:	See table.

PRE-START CHECKLIST

Levels

Petrol
Engine oil
Brake fluid
Battery
Windscreen washer

Operation

Engine Oil warning Lamp (2 CV 6)
Horn
Exterior lighting
Direction indicators
Brake lamps

Diverse

Correct setting of rear-view mirrors
Tyre pressure
Front grill muff
Seat belts
Adjustment of seats



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

2 CV 4 2 CV 6 OWNER'S MANUAL

Alphabetical Index

A

- [Accumulator](#)
- [Air conditioning](#)
- [Air filter cleaning](#)
- [Anti-theft device](#)
- [Ashtray](#)

B

- [Battery \(levels\)](#)
- [Battery \(maintenance\)](#)
- [Battery \(replacement\)](#)
- [Body \(maintenance\)](#)
- [Bonnet](#)
- [Boot](#)
- [Brakes](#)
- [Bulbs, changing](#)
- [Bulbs \(table\)](#)

C

- [Capacities](#)
- [Changing the battery](#)
- [Changing a bulb](#)
- [Changing a fuse](#)
- [Changing a sparking plug](#)
- [Changing a wheel](#)
- [Charge indicator](#)
- [Chassis number](#)
- [Chassis number stamping](#)
- [Choke](#)
- [Clutch](#)
- [Controls and accessories \(LH\) \(RH\)](#)

D

- [Dashboard](#)
- [Defrosting](#)
- [Demisting](#)
- [Dimensions, main](#)
- [Direction indicators](#)
- [Doors, opening](#)

K

- [Keys](#)

L

- [Levels, check and top-up](#)
- [Lighting, exterior, control, lamps](#)
- [Locks](#)

M

- [Maintenance \(air filter\)](#)
- [Mileage recorder](#)
- [Minor repairs](#)
- [Muff, front grill](#)
- [Opening roof](#)

P

- [Parking brake](#)
- [Pre-start checks](#)
- [Polishing](#)

R

- [Rear floor](#)
- [Rear hammock for parcels](#)
- [Rear-view mirrors](#)
- [Reverse gear](#)
- [Replacement parts, orders](#)
- [Running-costs](#)
- [Running-in](#)

S

- [Seat belts](#)
- [Seats](#)
- [Seats, backrest adjustment](#)
- [Service at 600 miles](#)
- [Signalling](#)
- [Sparking plugs and gaps](#)
- [Speedometer](#)
- [Spots on upholstery](#)

- [Driving position](#)

E

- [Engine, data](#)
- [Engine, number plate](#)
- [Engine, oil level](#)
- [Engine, oil, warning lamp](#)

F

- [Fuel, filling up](#)
- [Fuel gauge](#)
- [Fuse boxes](#)
- [Fuses](#)

G

- [Gearbox](#)
- [Gear changing](#)
- [Gear lever](#)
- [Glass \(plastic\)](#)
- [Guarantee](#)

H

- [Hazard warning device](#)
- [Headlamps, adjustment](#)
- [Headlamps, controls](#)
- [Heating](#)
- [Horns](#)
- [Hydraulic fluid](#)

I

- [Identification of car](#)
- [Ignition](#)
- [Interior lamp](#)
- [Instruments](#)

- [Starting engine](#)
- [Starting engine with handle](#)
- [Steering wheel \(cleaning\)](#)
- [Stopping the engine](#)

T

- [Tar, removal](#)
- [Technical data](#)
- [Temperature, interior](#)
- [Touching-up paintwork](#)
- [Towing the car](#)
- [Towing a trailer](#)
- [Transmission](#)
- [Travelling abroad](#)
- [Tyre pressures](#)
- [Tyres](#)
- [Tyres \(wear indicators\)](#)

U

- [Upholstery, cleaning](#)

V

- [Ventilation](#)

W


- [Warning lamp](#)
- [Washing the car](#)
- [Water, battery, windscreen washers](#)
- [Weights](#)
- [Wheel, changing \(brace\)](#)
- [Wheels, changing round](#)
- [Windscreen washer, control](#)
- [Windscreen washer, filling](#)
- [Windscreen wipers](#)
- [Window, cleaning](#)
- [Winkers \(Direction indicators\)](#)

[[Contents](#)] [[Notices](#)] [[Important Points](#)] [[Driving](#)] [[Maintenance](#)] [[Minor Repairs](#)] [[Miscellaneous Information](#)]

DRIVING

DRIVING POSITION

Dashboard Instruments

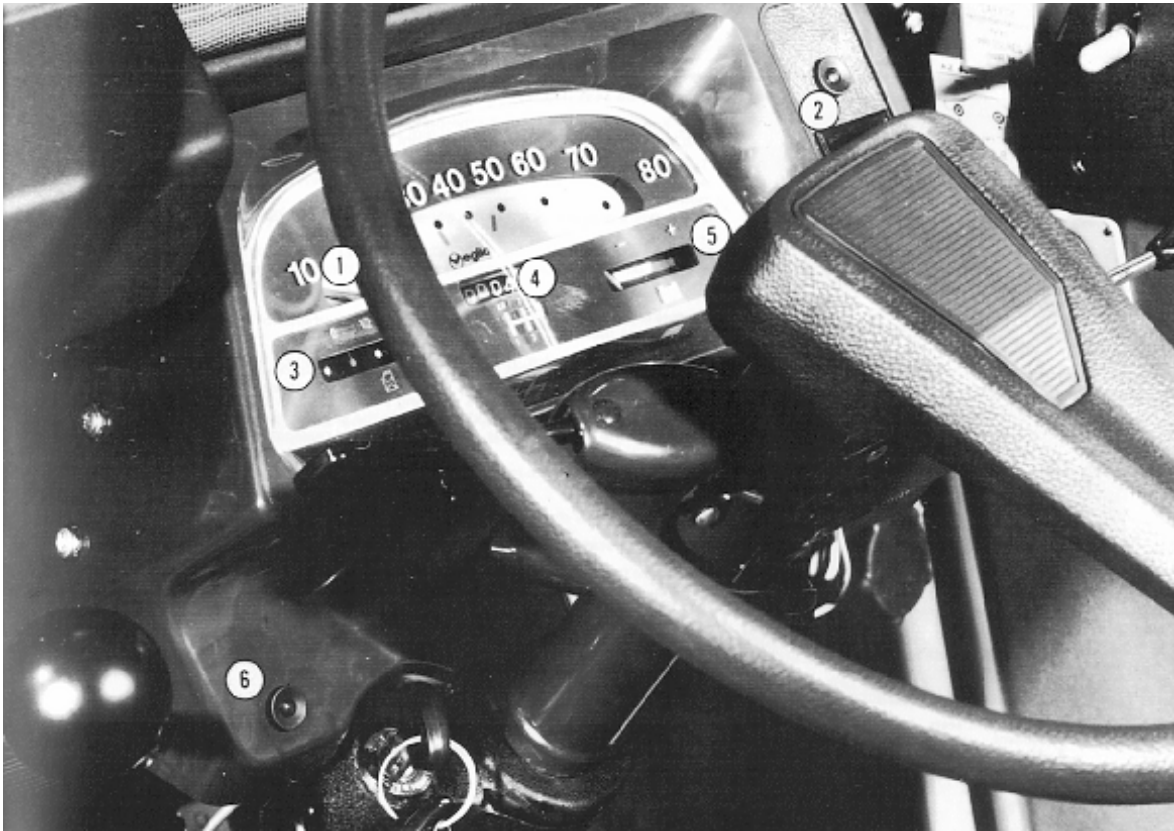

With the exception of the warning lamps for engine oil pressure (2) and hazard warning device (6), the illumination of the following dashboard instruments is controlled by the exterior lighting switch.

These instruments do not function when the ignition is off, with the exception of the hazard warning device (6).

1 - Speedometer: The red marks indicate maximum speed permitted in each gear.

2 - Engine oil pressure warning lamp (2 CV6 only): This lights up when the ignition is switched on and goes out as soon as the engine is running. If it lights up when driving, stop the engine immediately and top up the level of oil if necessary. If the lamp remains alight despite the oil level being correct, stop again and contact a Citroën dealer.

3 - Fuel gauge: Tank capacity: 4 1/2 Imp. Gal. (20 litres)

4 - Total mileage indicator

5 - Charge indicator: At normal engine running speed, the needle should remain in the white sector. If the needle should remain in either of the red sectors, consult a Citroën dealer. It is possible that, when driving with the headlamps on, the needle may stay in the white cross-hatched zone - indication that the battery is insufficiently charged. In normal circumstances, when driving, the generator should

charge the battery and within two hours the needle should return to the white zone. If this does not occur, consult a Citroën dealer.

6 - Hazard warning lamp: Flashes throughout the operation. If it does not function, check the direction indicators.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

OPENING and LOCKING

Doors, Boot (trunk), Bonnet (hood)



Fig. 1

Keys

- 1 - Anti-theft-ignition-starter
- 2 - Front side doors, boot lid

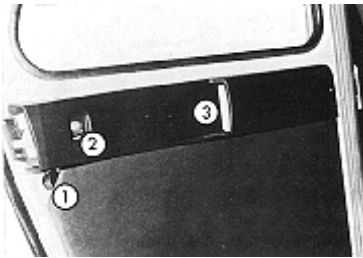


Fig. 2

- Rear side doors**
(inner door handle)
- 1 - Opening
 - 2 - Locking
 - 3 - Access for hand

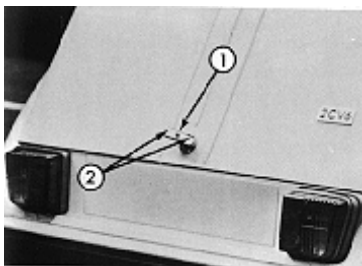


Fig. 3

- Boot Lid**
- 1 - Lock
 - 2 - Handle (opening)

KEYS (Fig. 1)

The larger key (1) operates the "Anti-theft-ignition-starter" device. The smaller key (2) locks the front side doors and the boot lid.

We recommend that note be taken of the key numbers in the space provided in the "Maintenance Guide" which came with the car when originally delivered or in a suitable spot for your convenience.

SIDE DOORS

From the outside:

To open: Turn the handle downwards.

To lock: With the key (for front doors only)

From the inside:

To open: Front doors: raise the lever situated at the front of the doors. Rear doors: (Fig. 2): press the lever (1)

To lock: Lower the catch (2) (rear side doors only)

To unlock: Raise the catch (2) (rear side doors only)

BOOT (TRUNK) LID (Fig. 3 & 4)

To open: Insert the side door key into lock (1). Unlock and turn the handle (2), the lid will open slightly. Completely raise the lid and keep it open by engaging the end of its stay (3) in the support (4).

To shut: Withdraw the stay from its support, secure it on the lid and lower the lid slowly while holding it.

To lock: Use the side door key. With the lid locked, the handle should turn loosely.

To remove: The boot lid can be removed completely by raising it to its maximum extent and by sliding it in its hinges towards the left or right.

Never drive the car with the boot lid open, supported by its stay.

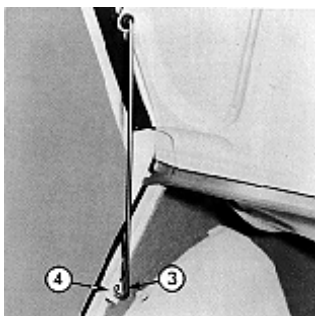


Fig. 4

Rear Boot Lid

- 3 - Stay
- 4 - Support

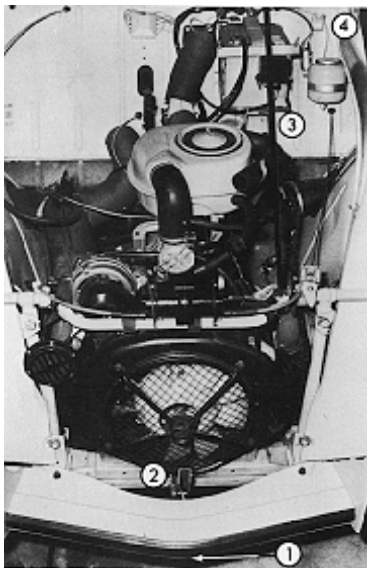


Fig. 5

Opening the bonnet

- 1 - Location of the release lever
- 2 - Safety catch
- 3 - Stay
- 4 - Support

BONNET (Fig. 5)

Lift the lever situated under the centre part of the front bumpers (1) to disengage the safety catch (2).

Raise the bonnet and insert the end-peg of the stay (3) into the rubber ring of the bonnet, pressing in if necessary.

Before closing the bonnet, do not forget to replace the stay in the notch of its support (4).

FUEL FILLER

It is situated above the RH rear wing of the car.

Opening: Press the cap and turn anti-clockwise.

Closing: Press the cap and turn clockwise until it clicks.




[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

DRIVING POSITION

Controls and Accessories (LHD)

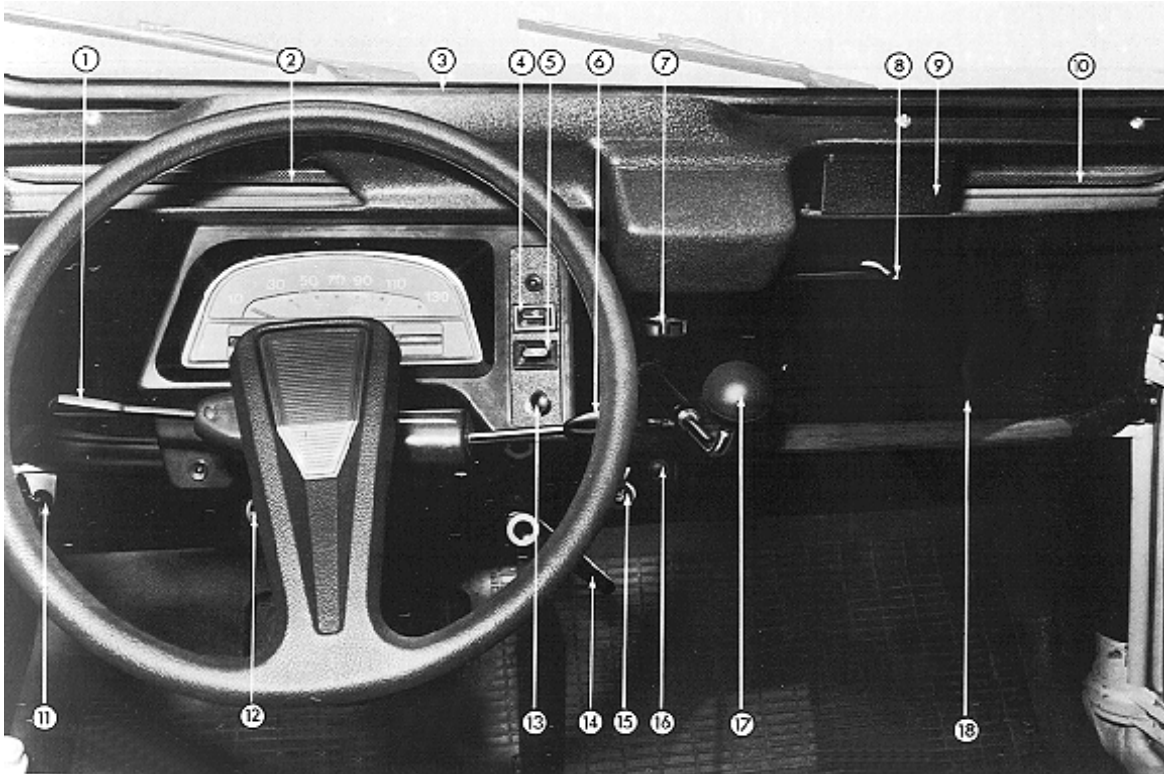

- 1 - Control for direction indicators
- 2 - Left ventilation aperature
- 3 - Demister-defroster outlet for windscreen
- 4 - Switch for hazard warning lamps
- 5 - Switch for electric windscreen wipers
- 6 - Control for lighting and horn
- 7 - Control for ventilation shutter
- 8 - Control for heating
- 9 - Ashtray
- 10 - Right ventilation aperature
- 11 - Control for headlamp height adjustment
- 12 - Combined anti-theft-ignition-starter switch
- 13 - Control for windscreen washer
- 14 - Emergency and parking brake
- 15 - Choke control
- 16 - Control for air distribution between windscreen and floor
- 17 - Gear-change lever
- 18 - Glove compartment




[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

DRIVING POSITION

Controls and Accessories (RHD)

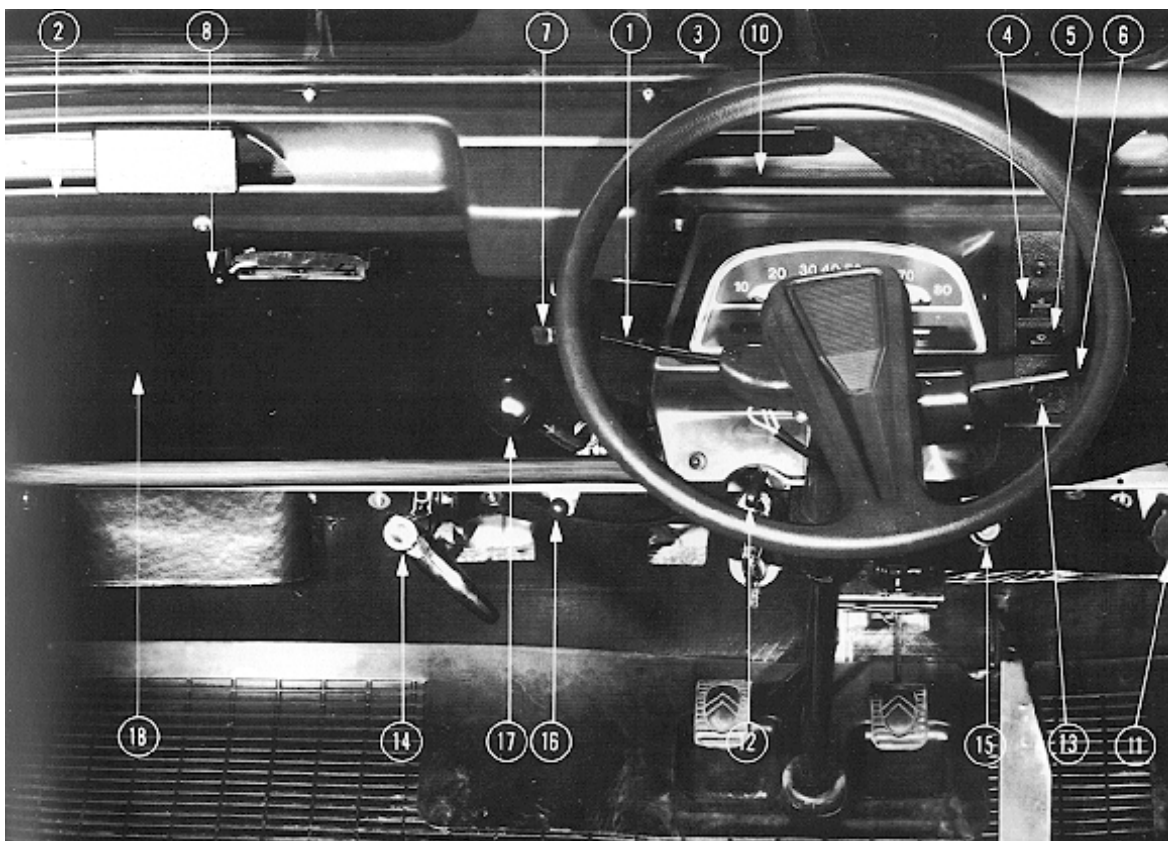

- 1 - Control for direction indicators
- 2 - Left ventilation aperture
- 3 - Demister-defroster outlet for windscreen
- 4 - Switch for hazard warning lamps
- 5 - Switch for electric windscreen wipers
- 6 - Control for lighting and horn
- 7 - Control for ventilation shutter
- 8 - Control for heating
- 9 - Ashtray
- 10 - Right ventilation aperture
- 11 - Control for headlamp height adjustment
- 12 - Combined anti-theft-ignition-starter switch
- 13 - Control for windscreen washer
- 14 - Emergency and parking brake
- 15 - Choke control
- 16 - Control for air distribution between windscreen and floor
- 17 - Gear-change lever
- 18 - Glove compartment



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

DRIVING POSITION

Seats, Rear-view Mirrors, Seat Belts

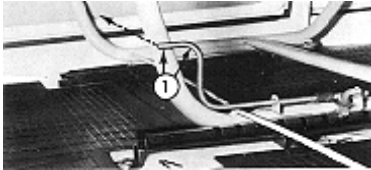


Fig. 8

Front bench adjustment

1 - Handle

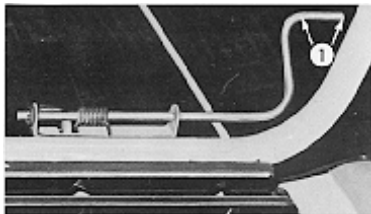


Fig. 9

Separate front seats adjustment

1 - Handle

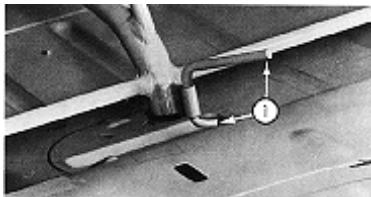


Fig. 10

Removal of rear bench seat

1 - Release lever

FRONT BENCH SEAT (Fig. 8)

Fore-and-aft adjustment: Raise the handle situated to the driver's right hand side (1) and slide the bench seat towards the front or rear. (Sliding travel: 7 notches)

To remove the seat: Withdraw the securing pin situated on the floor to the right of the central seat frame (central part), raise the handle (1), then slide the seat backwards out of its runners.

Make sure the securing pin is re-positioned when replacing the seat.

SEPARATE FRONT SEATS (Fig. 9) (on certain models)

Fore-and-aft adjustment: Raise the handle (1) which is situated to the driver's right hand side or the passenger's left hand side and slide the seat towards the front or rear. (Sliding travel: 7 notches)

To remove the seat: Withdraw the securing pin situated on the floor, next to the RH seat frame. Raise the handle (1) then slide the seat backwards out of the runners.

Make sure the securing pin is re-positioned when replacing the seat.

REAR BENCH SEAT (Fig. 10)

To remove the seat: Release the rear peg (1) by turning the lever towards the centre line of the vehicle. Tilt the seat forward to disengage its lower securing pegs from the floor.

Make sure the securing pegs are re-positioned when replacing the seat.

REAR-VIEW MIRROR

These vehicles are equipped with an interior rear-view mirror and an exterior one on the driver's side. On "Commercial" versions (French market vehicles) an additional exterior rear-view mirror has been fitted on the passenger's side of the car.



Fig. 11

Seat belt

- 1 - unfastening
- 2 - Adjusting buckle



SEAT BELTS (Fig. 11) (French market)

To fasten: Engage the end of the levered buckle into the flexible buckle of the same colour.

To unfasten: Release the lever (1).

Adjustment: The belt buckle must be level with the hip, at the side, and the strap should cross the chest. Alter the length of the short part (towards the centre of the vehicle), by sliding the strap into the adjustment buckle, the belt should be adjusted so that it is not too tight on the body.

These belts are not designed for children under six years of age, and any one belt must be used by one person only.

The belts must not be twisted whilst in use, nor must they be rubbed against edges, since this may result in wear or breakage. When a seat belt is not in use, hook the lever end, inserting it into the buckle situated under the upper anchorage point - to release it, move the opening lever.

If the belts have undergone any strain due to impact, replace them and have the anchorages checked.

For markets outside France, consult your Citroën dealer who will advise you on the legal requirements and fittings.

DRIVING POSITION

Adjust the fore-and-aft position of the bench-seat or of the front driver's seat to suit the controls.

Adjust the rear-view mirrors to suit the driving position adopted. Then fasten the seat belt and adjust its length as necessary.

[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

STARTING

Anti-theft, Ignition, Starter

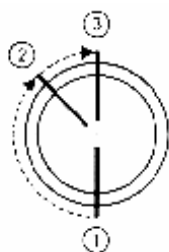


Fig. 12

Anti-theft-ignition-starter device

- 1 - Anti-theft position
- 2 - Ignition position
- 3 - Starter position

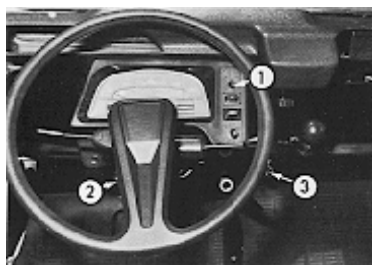


Fig. 13

LHD Starting the engine

- 1 - Engine oil pressure warning lamp (2 CV6)
- 2 - Anti-theft-ignition-start
- 3 - Choke control

ANTI-THEFT-IGNITION-STARTER SWITCH (Fig. 12)

The device is situated below the dashboard, on the left-hand side of the steering column.

The successive positions of the key when turned clockwise are as follows:

- 1 - Anti-theft (steering locked)
- 2 - Garage (steering free)
- 3 - Ignition
- 4 - Starter

When turning from the "Anti-theft" position to the "Garage" position, it may be necessary to rock the steering wheel slightly while turning the key.

As there is a safety device which prevents operating the starter twice in succession, it is necessary (if the engine stops or does not start first time), to switch off the ignition, then switch it on again in order to be able to operate the starter a second time.

To withdraw the key, pull it slightly when approaching the required position ("Anti-theft" or "Garage").

Never withdraw the key before the car has come to a complete stop.

CHOKE CONTROL (Fig. 13 - Mark 3)

The choke must not be used unless the engine is cold (3).

[Click here for instructions on using the starting handle.](#)

BEFORE STARTING THE ENGINE

A quick check at the "Pre-start check list" can avoid an oversight.

STARTING THE ENGINE (*Do not run the engine in an enclosed space*)

After a long stop or when the temperature is very cold, first "free" the engine using the starting handle without switching on the ignition or using the choke.

Make sure that the gear lever is in neutral and that the handbrake is fully on.

Turn the ignition key as far as possible: the ignition is on. On "2 CV6" model the oil pressure warning lamp lights up (Fig. 13, mark 1).



Fig. 13a

RHD Starting the engine

- 1 - Engine oil pressure warning lamp
(2 CV6)
- 2 - Anti-theft-ignition-start
- 3 - Choke control

If the engine is cold:

Do not touch the accelerator pedal. Pull the choke control out fully. Operate the starter until the engine starts to run. Release the controls a few seconds after the engine starts (the choke control will automatically return to its mid-way position). Let the engine warm up for a few minutes in neutral without racing it.

If the engine is hot:

Do not touch the choke control. Depress the accelerator pedal fully and do not release it. Switch on the ignition, operate the starter until the engine starts to run then leave your foot off the accelerator pedal progressively.

In mountainous areas after a short stop:

Operate the starter without depressing the accelerator. If the engine starts to run and dies, accelerate progressively to avoid stalling. If the engine does not start at idling speed, pull the choke out to its mid-way position.

BEFORE ENGAGING FIRST GEAR

If necessary, reduce the engine speed by progressively pushing in the choke control. After a few minutes driving, the choke being no longer necessary, push it fully home. On "2 CV6" models, the engine oil pressure warning lamp (Fig. 13, mark 1) must go out.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

Driving

Gears, clutch, brakes

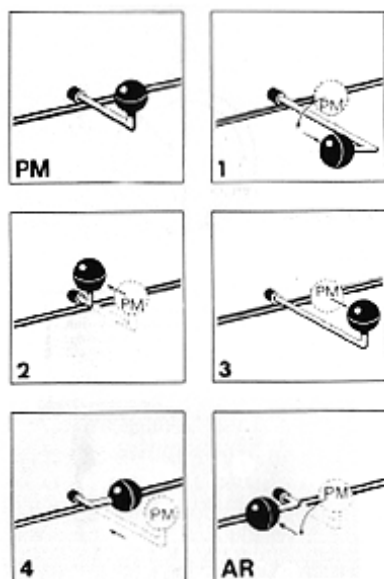


Fig. 14

Gear lever

PM = Neutral

AR = Reverse gear

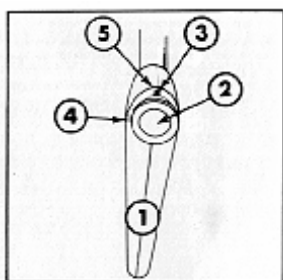


Fig. 15

Handbrake (3 pos.)

- 1 - Handle
- 2 - Safety button
- 3 - Locking lug
- 4 - Lock notch
- 5 - Release notch

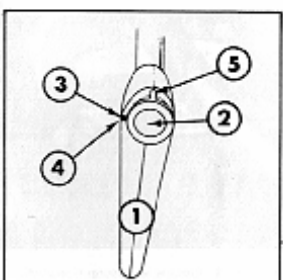


Fig. 16

GEAR SELECTION (Fig. 14)

The gear positions are indicated on a diagram appearing on the glass of the speedometer, below the total mileage indicator.

To engage reverse gear, wait until the car has stopped. Do not forget to place the lever in neutral when parking. Change gear as soon as the speedometer needle reaches the appropriate red marks so as to avoid over-accelerating the engine.

CLUTCH (According to model)

Foot operated of the conventional type.

Foot operated, of the conventional type, with an auxiliary centrifugal device, the purpose of which is: either to disengage the clutch as soon as the engine speed falls below a certain limit, or to progressively re-engage the clutch as the engine speed is increased.

When the car is fitted with this automatic device, you can: stop the car without depressing the clutch pedal, even when it is in gear, and move off again by simply accelerating, provided either 1st or 2nd gear is engaged; drive in slow-moving traffic without having to change gear, provided either 1st or 2nd gear is engaged; move off on a hill without having to use the clutch pedal, provided that the slope is less than 1 in 10 (10%) and that the vehicle is not fully-laden.

At a speed of over about 1,000 rpm, the clutch behaves in the same way as a conventional clutch. The clutch pedal must be used to change gear.

When running downhill, slowing down abruptly may cause the clutch to disengage. Re-engage the clutch immediately with a light touch on the accelerator before the car gathers speed in free-wheeling.

EMERGENCY AND PARKING BRAKE (Handbrake Fig. 15 and 16)

To apply the handbrake, pull the handle (1).

To release it, pull the handle lightly, press the button (2) and push the handle fully forward, keeping the button pressed.

Handbrake
(locked)

LOCKING DEVICE (Fig. 15 and 16)

To lock the handbrake on, pull the button (2) and turn it one quarter of a turn to the left or right until the lug (3) engages in the lock notch provided (4).

To release it, pull the button (2) and turn it until the lug (3) falls into the release notch (5).



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

Signals and Visibility

Lights, signals, windscreen wipers, windscreen washers

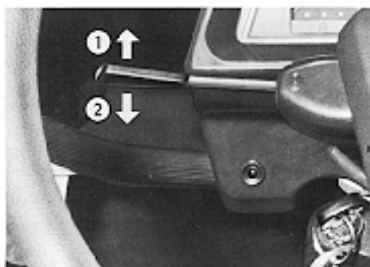


Fig. 17

Signalling control

- 1 - RH direction indicator
- 2 - LH direction indicator



Fig. 18

- 1 - Electric windscreen wipers
- 2 - Windscreen washer

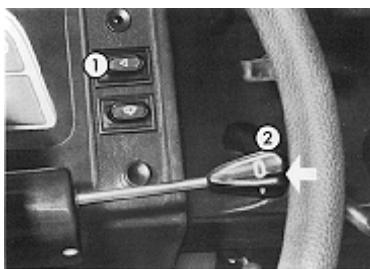


Fig. 19

- 1 - Switch for hazard warning lamps
- 2 - Switch for headlamps, side and tail lamps and horn



CONTROL FOR DIRECTION INDICATORS (Fig. 17)

Right hand and left hand indicators: move the lever in the direction in which you are going to turn the steering wheel. To cancel the signal, return the lever to its mid-way position.

An audible warning device is heard while the indicators are flashing. If it does not work, check the indicators.

ELECTRIC WINDSCREEN WIPERS (Fig. 18)

To operate: Push the button (1).

To stop: Push the button and the wipers will park automatically at the end of their travel.

WINDSCREEN WASHERS (Fig. 18)

To operate: Press the button (2). The height of the jet depends on the pressure exerted.

LIGHTING AND HORN SWITCH (Fig. 19)

Lights out: The lights are out when the side of the knob marked "O" is facing the driver.

Side and tail lights: Turn the knob one notch ("V").

Main beam: Turn the knob to the second notch ("R").

Dipped: In "Side and tail" or "Main beam" position, push the lever away from the steering wheel.

Horn: Depress the end of the knob (2).

SWITCH FOR HAZARD WARNING LAMPS (Fig. 19)

To operate: Press the switch (1) - the four winkers function.

To stop: Press the switch again.

This warning device operates even when the ignition is switched off.

[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

Air Conditioning

Ventilation, heating, de-misting

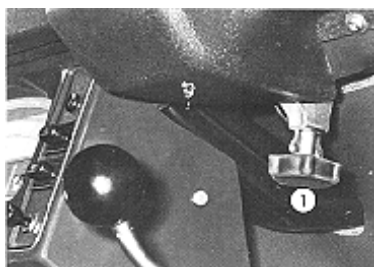


Fig. 20

Ventilation shutter

1 - Control knob

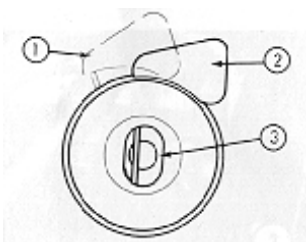


Fig. 21

Front door windows

1 - Lock
2 - Lock control
3 - Released position

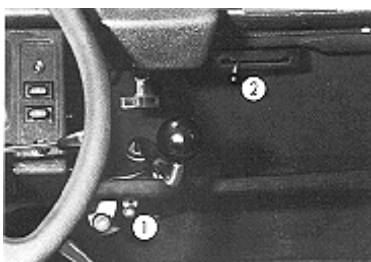


Fig. 22

Air ventilation controls

1 - Air distribution: windscreen/floor
2 - Warm air flow

FRONT VENTILATOR (Fig. 20)

Turn the knob (1) clockwise or anti-clockwise according to the required output.

FRONT DOOR WINDOWS (Fig. 21)

To partly open them: Press the catch situated on the lower part of the window frame. The windows will remain partially open during the journey.

To open them fully: Push the mobile part of the window right up in order to engage the retaining head in the opening of the upper exterior lock (1).

To close them: Remove the retaining head from the lock while operating the control (2) to bring it to the released position (3) then close the window.

DUCTS FOR WINDSCREEN AND FLOOR (Warm air only) (Fig. 22)

To operate: Push the button right in (1), then push the lever (2) to the *left* (on 2 CV4) or to the *right* (on 2 CV6).

To stop: Move the lever (2) in opposite direction.

AIR DISTRIBUTION BETWEEN UPPER AND LOWER AREAS (Warm air only) (Fig. 22)

Button (1): PULL - Air is directed towards windscreen. PUSH - Air is distributed towards floor. MIDDLE POSITION - Air is distributed between windscreen and floor.

FRONT GRILL MUFF (Fig. 23)

Below 10C (50F) fit the front grill muff. Engage the lug of the muff (1) into the corresponding slot in the surround, then with an upward

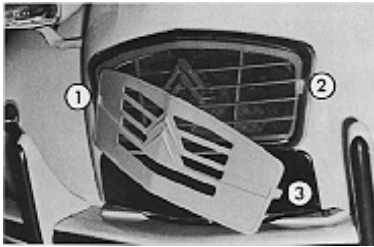


Fig. 23

Fitting the front grill muff

- 1 - 3 - Lugs of muff
- 2 - Front grill slot



movement, proceed in the same way for the other lug (3 and 2).

Above 15C (59F) the front grill muff must of necessity be removed.

[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

Comfort

Folding canvas hood

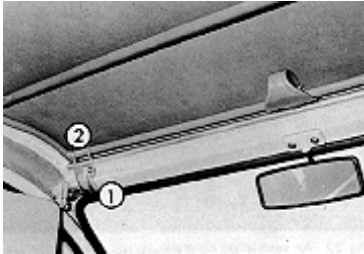


Fig. 24

Opening the front of the hood

- 1 - Locking lever
- 2 - Retaining hook



Fig. 25

Opening the front of the hood

- 1 - Frame
- 2 - Cross-bar

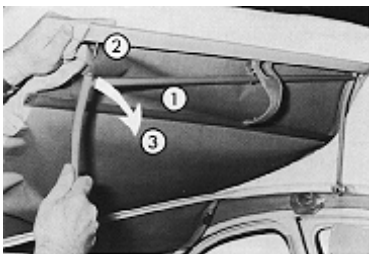


Fig. 27

Opening the hood completely

- 1 - Pivoting frame
- 2 - Retaining pins
- 3 - Tipping over the frame

The canvas hood can be fixed in two positions when open: mid-way or right back above the rear window.

Half-open

Open the hood from the inside of the vehicle **but never when in motion.**

Pivot the locking levers (Fig. 24, Mark 1) to release the retaining hooks. (2)

Raise the front of the hood so as to disengage it completely (Fig. 25).

Pivot the frame (Fig. 25, Mark 1) while pushing the cross-bar (2) and tip over the frame towards the centre pillar.

Secure the frame (Fig. 26) by means of the strap (1) and press-stud (2).

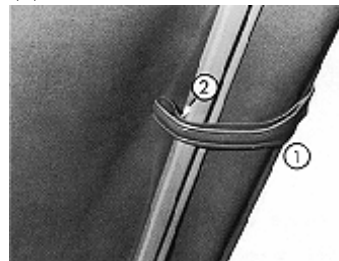


Fig. 26

Opening the front of the hood

- 1 - Strap
- 2 - Press-stud

Fully open

Open out from the outside once the front of the hood has been opened:

Remove from the tube of the frame (1), the pins (Fig. 27, Mark 2) attached to the canvas hood, and tip over the frame towards the front (3).

Secure it by means of the hooks (Fig. 24, Mark 2).

Free the hood securing plate (Fig. 28, Mark 1) from the lugs (2).

Roll up the hood as far as the rear window and fasten it down by means of the straps (Fig. 29, Mark 1) and press-studs (2).

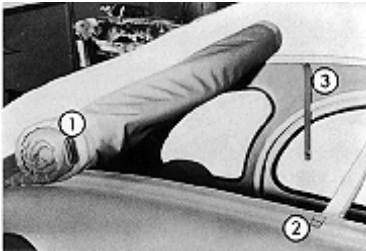


Fig. 28

Opening the hood completely

- 1 - Securing plate
- 2 - Lugs
- 3 - Securing strap

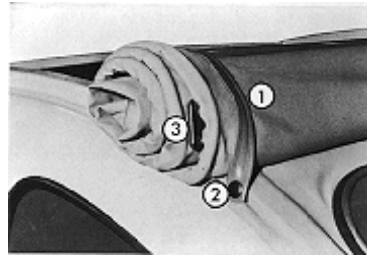


Fig. 29

Opening the hood completely

- 1 - Securing strap
- 2 - Press-stud
- 3 - Securing plate



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

DRIVING

Comfort

Accessories

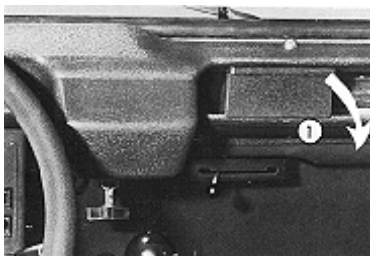


Fig. 30

Ashtray

1 - Opening direction

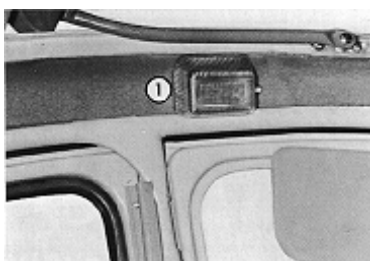


Fig. 31

1 - Interior lamp



ASHTRAY (Fig. 30)

To open: Pull on the movable moulding (1).

To empty: Press on the leaf-spring and withdraw the ashtray.

To replace and close: Reverse the sequence.

INTERIOR LAMP (Fig. 31)

It is located at the top of the Left hand centre pillar and fitted with a built-in switch.

REAR HAMMOCK FOR PARCELS

It is secured between the rear seat and rear window.

It can be removed with the rear seat so as to enable the maximum capacity of the boot to be used.

MOVABLE REAR FLOOR (on certain models)

The 2 CV4 and 2CV6 saloons can be converted into commercial version.

In this case, consult your dealer who will advise you on legal requirements.

[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MAINTENANCE

Levels

Checks and Topping up

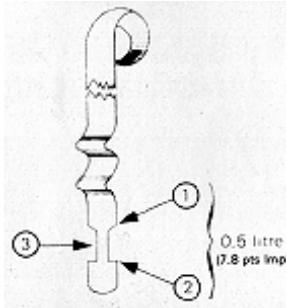


Fig. 32

Engine Oil Dipstick

- 1 - Maximum
- 2 - Minimum
- 3 - Oil level reading

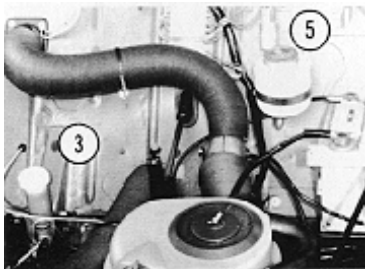


Fig. 32a

RHD Levels

- 3 - Brake fluid level
- 5 - Windscreen washer bottle

1 Engine oil dipstick

The engine oil level, which must lie between the ends of the cut-out on the dipstick, must be checked from time to time between oil changes and, in particular, before any long journey.

The check should be carried out with the car as level as possible, after the engine has been stopped for at least 10 minutes.

To top up, add oil without the level going above the top end of the dipstick cut-out. The length of the cut-out is equivalent to 7/8 imp. pints (0,5 litre).

2 Engine oil filler pipe

In Summer, as in Winter, use "TOTAL Altigrade GT Spéciale Autoroute 20 W 40" or "GTS 20 W 50" oil. If "TOTAL" oils are not available, use equivalent grades of other reputable makes.

In very cold countries (temperatures often lower than -10C (14F), use "TOTAL Altigrade GT Spéciale Autoroute 10 W 30" or "GTS 10 W 30" oil, or equivalent grades of other reputable makes.

Never use additives

Do not forget to tightly seal the oil filler cap.

3 Brake fluid reservoir

The level, visible through the transparent reservoir, must never go below the "Danger" mark. If the level drops suddenly, consult a Citroën dealer without delay. We recommend the "70 R 3" fluid, distributed by TOTAL. If this product is not available, use fluids with specification "S" or "V" : NF R 12640 or SAE J 1703 a.

4 Battery

Check the level of the electrolyte frequently, especially in Summer. The level should be 3/8 to 3/4 in. (1 to 2 cm.) above the plates in each of the six cells. Top up with distilled water. *Never add acid. Never bring a naked flame near a battery during checking.*

5 Windscreen washer

Top up with clean water, to which may be added a product such as "Clearalex", "Screen Clear" or "Stop-Clair" at any time, or a solution such as "Stop-Gel" in Winter.

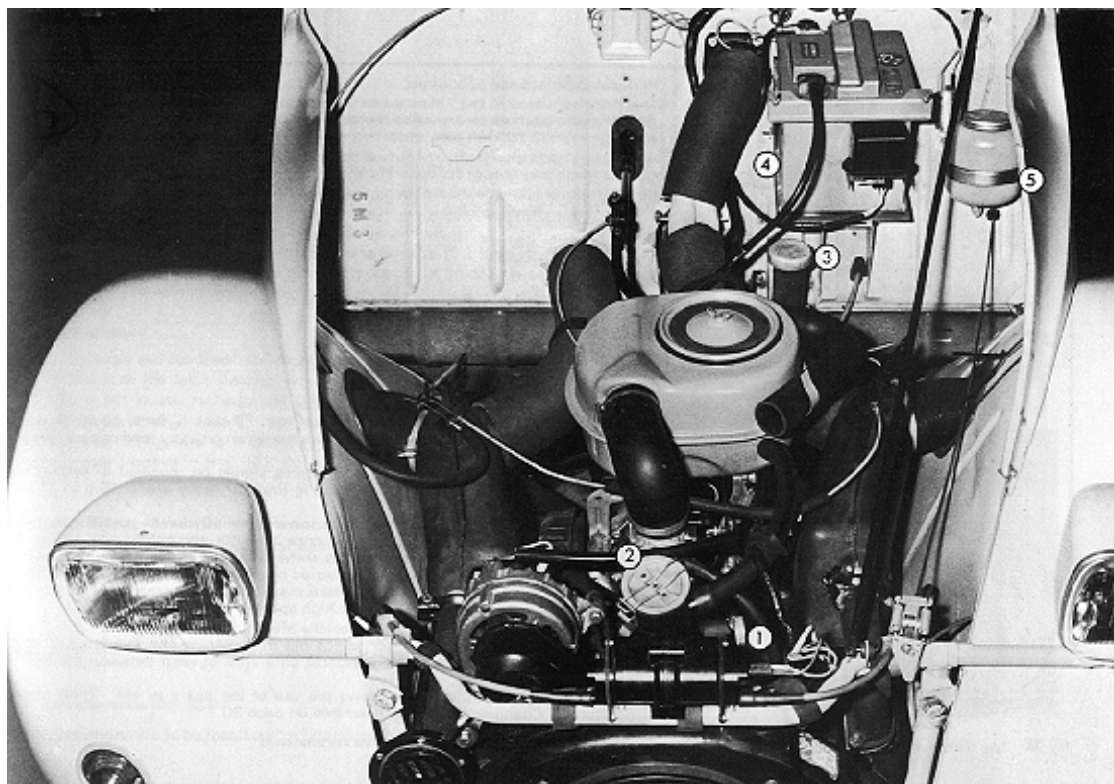


Fig. 32b

Levels

- 1 - Engine oil dipstick
- 2 - Engine oil filler tube
- 3 - Brake fluid reservoir
- 4 - Battery
- 5 - Windscreen washer bottle



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MAINTENANCE

Maintenance

Mechanical and Electrical

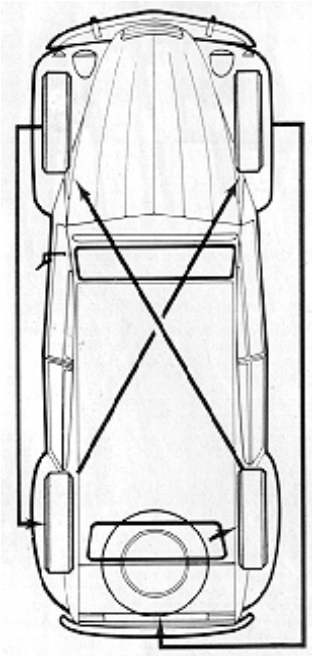


Fig. 33

Tyre change-around

Periodic Maintenance Operations

These are indicated in the "Maintenance Guide", which accompanied the car when first delivered. We would recommend you to adhere to the frequencies indicated and would remind you that we recommend "TOTAL" lubricants.

All mixtures and experiments are forbidden, and, in particular, the use of oil additives of any kind, as these may lead to serious trouble.

Never grease or lubricate the rubber mounted link situated under the bonnet, above the gear change lever. Never grease or lubricate the gear change lever.

TYRES: "MICHELIN" (*Do not use tyres other than those we recommend.*)

Series fitted: 125-15 X

Authorized series: 135-15 X, 125-15 X (M+S), 135-15 X (M+S), 135-15 ZX

Pressures: 20 psi (1,4 bar) at front, 26 psi (1,8 bar) at rear, 29 psi (2 bars) on spare wheel.

These pressures apply to laden or empty vehicles, on an ordinary road or on a motorway, whatever the speed. On authorized series 135-15 ZX, the pressures should be modified in certain cases: *on pebble road surfaces*, 23 psi (1,6 bar) in front; *in sandy area*, 15 psi (1 bar) at front and rear.

Do not forget to correct the pressure of the spare wheel as soon as possible after fitting.

Tyre pressures must be checked at least once a month and before any long journeys since safety depends on correct pressures; these also have appreciable influence on the life of the tyres. The check should be carried out when the tyres are cold, before they have been heated by running: the pressure may in fact be increased by up to 7 psi (0,5 bar) on a loaded vehicle running at high speed.

Keep a check on wheel balancing, especially after a puncture.


Changing the wheels around, which evens out the wear on the five tyres, should be frequent enough to prevent any appreciable difference of wear between the two tyres on one axle.

Follow the plan opposite which shows the use of the spare wheel.


Then rest the pressures. Changing a wheel is described here.

Tire Wear Indicators

These are located at regular intervals across the tread and show up according to localised wear of the engraving when the rubber

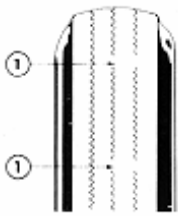**Fig. 34**

Tyre wear indicators
1 - Position of indicators

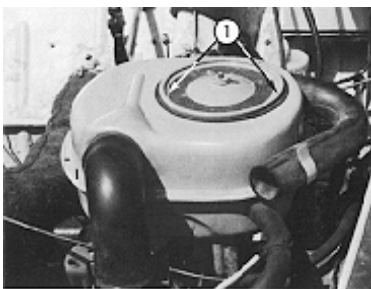**Fig. 35**

Air filter
1 - Cover

reaches a certain degree of wear (see Fig. 34). The tyre concerned should then be replaced as soon as possible.

Snow Tyres

125-15 X (M+S) and 135-15 X (M+S) tyres can be fitted with studs. In which case, it is necessary to increase the pressures by 3 psi (0,2 bar). In some countries there are legal requirements on the use of studded tyres; local Citroën dealers will supply you with information on this point.

Battery Maintenance

Check the terminals and the leads for cleanliness. If they are sulphated, unscrew them, clean them, and soak the felt insulating washers in castor oil or in neutral vaseline oil. If the vehicle is not in use, recharge the battery every month.

In Winter, a correct charge protects against frost. The battery charged normally (a density of 1.25 to 1.27) resists to -50C (-58F), whilst a discharged battery (density 1.07 to 1.09) may burst at -5C (23F).

Do not disconnect the leads from the terminals when the engine is running.

Never recharge the battery without first having disconnecting the leads from the two terminals.

Air Filter Maintenance (Fig. 35)

Cleaning instructions are to be found on the filter cover (1).




[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MAINTENANCE

Maintenance

Bodywork

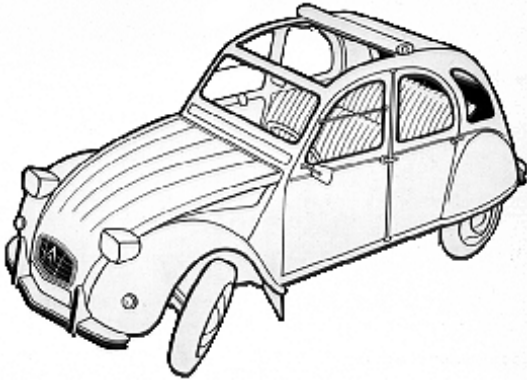

The bodywork should be looked after regularly, especially in Winter. This maintenance should not only concentrate on the paintwork and the metal embellishers but should take in the underside of the car as well: advice in this connection can be obtained from any Citroën dealer.

Never wipe the car when dry since this will scratch the finish. Petrol, trichlorethylene and alcohol harm paint and transparent plastic such as the sidelamp covers. Do not use strong detergent solutions either.

Cleaning the Bodywork

Frequent washing is necessary to keep the paintwork in good condition but it is nevertheless essential that certain precautions be observed; here are some reminders:

Never wash the car in full sunlight nor during frost. If the car has been exposed to the sun or if the bonnet is still warm after a journey, wait until the surfaces have cooled down.

The body should first be rinsed with copious amounts of water applied either with a soft sponge, exerting no pressure and rinsing the sponge often, or with a low pressure jet. If a car shampoo is used, rinse afterwards with plenty of water.

Wipe the car dry with a clean chamois leather which is rinsed and wrung out frequently, ensure that no spots of water are left on the paintwork.

When setting off, apply the brakes a few times to dry out any water on the brake linings.

Cleaning the Windows

The windows may be cleaned with alcohol or with special commercial products. Silicone based products are not recommended.

Pivot the windscreen wiper blades to the front and clean them with a little soapy water without putting pressure on the rubber edges.

Metal Decorative Components

Wash in suds or water to which a little detergent such as Teepol has been added (2.5 to 3.0 cu. in. per gallon or 10 to 15 ccm per litre), preceded and followed by a thorough rinsing with clean water.

The embellishers in particular should be washed very often since, in time, mud might damage the surface so that repolishing may become necessary.

After drying with a chamois leather, it is recommended that a

product like "ABEL PROTEGE CHROME", or other proprietary chrome-polishes, be applied as a protection for the polished metal finish.

Spots of Tar on the Bodywork

These should be removed as soon as possible.

Do not scrape off and do not use petrol or a spot remover for cloth, but a special tar remover, such as "ABEL", or other proprietary tar removers.

Polishing the Paintwork

Polishing is not recommended for metallic paintwork, because of the risk of rings appearing.

On the other hand, for non-metallic paintwork, it is recommended to carry out polishing at the end of Winter. For this, the body must be perfectly clean and dry.

Use products that are only slightly abrasive, I.E. liquid polishes (e.g. "ABELISSME") and follow the manufacturer's instructions.

Slight Damage to the Paintwork

Scratches and slight damage to the paintwork can be rectified at little cost without necessitating extensive respraying, by using aerosol cans which contain air-drying retouching paint. These sprays, which are sold commercially, exist in all Citroën shades. They are simple to use and instructions for use are given on the packing.

The paint references for the car, can be found on a small disc (see Fig. 36) situated under the bonnet and fixed to the upper part of the scuttle, on the right hand side.



Fig. 36

**Paint
reference
disc.**




[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MAINTENANCE

Maintenance

Interior

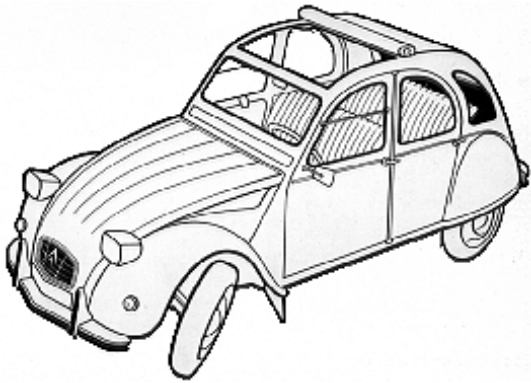

Cleaning the Upholstery

(A sample of cloth can be found stapled under the driver's seat)

Only use mild non-caustic soaps, toilet type.

According to model:

Cloth upholstery:

This should be brushed or, preferably suction cleaned. If the upholstery is generally very dirty, use commercial "dry foam", after carefully removing all traces of dust.

Plastic Trim (and folding canvas hood):

This can be cleaned with a product like "SPIC" or with a little soapy water, followed by a good rinse and wipe with a dry cloth. We do not advise the use of products intended to make these parts shine.

Isolated Spots on Upholstery

Spots on cloth or plastic trim upholstery can be cleaned off with water containing soap or a detergent like Teepol.

If this treatment is unsuccessful, try 90° alcohol (commercial methylated spirit) or lead-free petrol.

Use pads well wrung-out and rub lightly.

Solvents like acetone or trichlorethylene are not recommended.

Complex spot removers containing absorbent earths are also obtainable: these have the advantage, when used properly, of not leaving rings (e.g. "K2R").

Seat Belts

These should be cleaned with soapy water, or with water with a little detergent of the "Teepol" type added, taking care not to touch the metal parts. Remove the deepest stains with 90° alcohol (commercially methylated spirits), or with lead-free petrol. Do not dye the webbing as this may weaken them.

Dashboard Instruments

Use either soapy water, or diluted detergent, to the exclusion of all other products.

Steering Wheel

Use soapy water or water with a detergent of the "Teepol" type added. In no circumstances, use solvents such as alcohol, lead-free petrol, or trichlorethylene.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

Replacing a Wheel

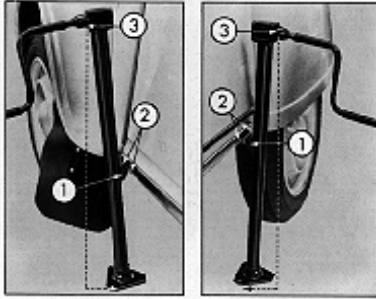


Fig. 37 Fig. 38

37 - Replacing a front wheel

- 1 - Lifting arm
- 2 - Support
- 3 - Screw

38 - Replacing a rear wheel

TOOL KIT

The spare wheel and jack, the starting handle, and the wooden block are positioned in the boot (trunk).

REMOVAL (Fig. 37 and 38)

Engage fully the handbrake

Position the wooden block under the wheel directly diagonally opposite the one which is to be changed. If the road is on a slope, wedge the wheel on the downward side.

Unlock but do not slacken the three wheel nuts with the wheel brace.

Place the base of the jack well under the car and turned slightly towards the wheel to be changed, so as to avoid contact with the bodywork in the final stage of jacking.

Engage lifting arm (1) fully into socket (2) (these sockets are situated under the front and rear doors).

Turn the operating screw (3) clockwise by hand until the jack is in firm contact.

Then use the handle to raise the car.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

Headlamp Adjustment

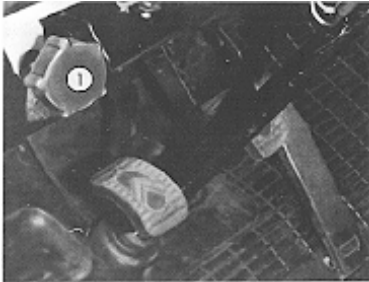


Fig. 39

**Headlamp adjustments
from inside the car (LHD)**
1 - Adjusting knob

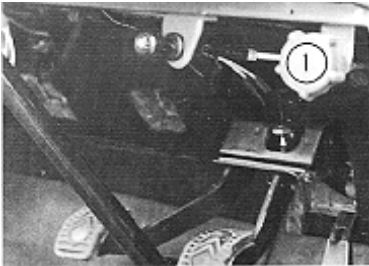


Fig. 39a

**Headlamp adjustments
from inside the car (RHD)**
1 - Adjusting knob

To avoid dazzling oncoming drivers the headlamps should have a range of between 30 to 50 metres (33 to 55 yards).

Adjustment from inside the car (Fig. 39):

To lower the beams: turn the knob (1) anti-clockwise.

To raise the beams: turn clockwise.

Adjustment from outside the car:

The range and direction of each headlamp can be modified by operating the hexagonal nut which secures the headlamp to its ball joint support.

As these adjustments from outside the car can only be carried out in a workshop containing the necessary checking equipment, have them done, or checked, by a specialist in these matters.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

Replacing a Bulb



Fig. 40

Headlamps

1 - Retaining screw



Fig. 41

Headlamps

1 - Connector
3-4 - Holding springs
5 - Bulb flange

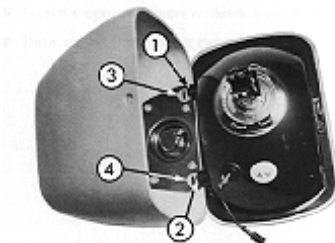


Fig. 42

Headlamps

1-2 - Locating lugs
3-4 - White plastic buttons

DIP/MAIN BEAM HEADLAMPS (Fig. 40 and 41)

They are fitted with bulbs: 12 V - 45/40 W.

To take the headlamp out: remove the screw (1), then tilt the unit forward.

To replace a bulb:

Disconnect the black plastic connector (2) carrying the feed leads. Swing the springs (3 and 4), which hold the bulb flange (5) in place, through 90°.

Change the faulty bulb and fit the new one by turning the flange until the locating lug falls into its slot.

Do not forget to clip over springs (3 and 4) and to reconnect the connector (2).

To refit the headlamp unit (Fig. 42)

Position the lugs (1 and 2) opposite the white plastic buttons (3 and 4).

Pivot the unit and refit it into the headlamp housing. Fit and tighten the screw (1 - Fig. 40).

We recommend that you have your headlamp beam checked by a specialist every time a bulb is changed.

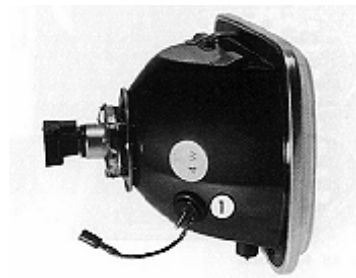


Fig. 43

Front side lamps

1 - Socket

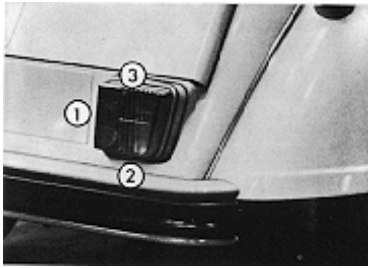


Fig. 44

Rear lamps

- 1 - Tail and number plate lamp
- 2 - Direction indicators
- 3 - Brake lamp



SIDE AND TAIL LAMPS

Front bulbs (Fig. 43): 12 V - 4 W - BA 9S T 8/4

These bulbs are placed directly in the reflectors of the lamp units (1).

Pull the socket, turning it slightly.

Tail lamps (Fig. 44): 12 V - 5 W - R 19/5

The bulbs (1) combined in the covers, include the brake and direction indicator lamps.

To remove the covers, unscrew the two screws.

Direction indicators: 12 V - 21 W - P 25/1

FRONT: Remove the cover, unscrew the two screws.

REAR: See "Tail Lamps" (Fig. 44 - Mark 2).

Brake lamps: 12 V - 21 W - P 25/1

See "Tail Lamps" (Fig. 44 - Mark 3).

Rear number plate lamps:

These bulbs are also used for the "Tail Lamps".

Interior lamp: 12 V - 7 W - BA 15 S

Press the cover lightly on both sides and pull it downwards.

[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

Replacing a Fuse, The Battery

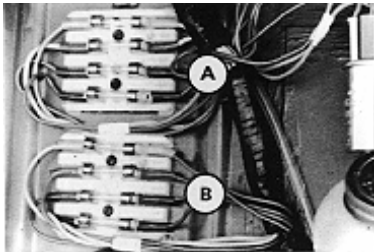


Fig. 45

Fuse boxes

REPLACING A FUSE

Before fitting a new fuse, it is necessary to discover the cause of the incident, and have it rectified.

The 8 fuses protecting the circuit (5 fuses of 16 amps and 3 of 10 amps) are found inside two boxes situated under the bonnet on the scuttle.

Pull off the fuse box cover, and replace the fuse with one of the same amperage.

UPPER FUSE BOX (Item A)

Green marking (10 A)	Yellow marking (16 A)
LH side and tail lamps (and rear number plate lamps)	Brake lamps Interior lamp Hazard warning device
Red marking (10 A)	Blue marking (16 A)
RH side and tail lamps (and rear number plate lamps)	Fuel gauge Direction indicators Windscreen wipers Alternator field feed Charging rate indicator Engine oil pressure warning lamp (on "2 CV 6")

LOWER FUSE BOX (Item B)

Green marking (16 A)	Blue marking (16 A)
RH dipped beam	LH main beam
Red marking (16 A)	Yellow marking (16 A)
LH dipped beam	RH main beam

REPLACING THE BATTERY (Fig. 46)

Battery reference: 12 V - 125/25 Ah. CEI (or 150/30 Ah. CEI)

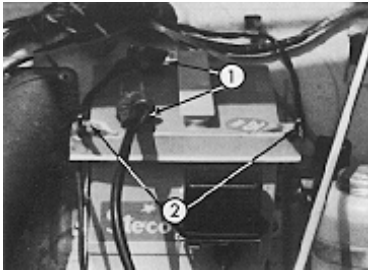


Fig. 46

Battery

- 1 - Terminals
- 2 - Tie-rods



Disconnect the battery terminals, always beginning with the negative one.

Unscrew the two tie-rods of the support frame then disengage the battery by sliding it towards the front of the vehicle.

Check that the terminals are in the correct position before fitting the new battery.

[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

Replacing a sparking plug



Fig. 47

Electrode gap

FACTORY FITTED:

AC 42 F
BOSCH W 225 T1
EYQUEM 755
MARCHAL 35
CHAMPION L 85
MARELLI CW 7 N BT

Electrode gap: .026" to .030" (0.65 to 0.75 mm) (Fig. 47).

Removal:

After starting to undo the sparking plug with a plug spanner (wrench), push a rubber tube over the insulator to ease removal. Finish undoing the plug then take it out.

Fitting:

Cap the insulator of the replacement plug with the rubber tube. Screw in the plug with its tube until finger tight. Finish tightening with the plug spanner (wrench).



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MINOR REPAIRS

Starting using the starting handle

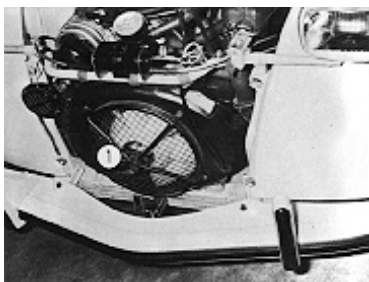


Fig. 48

Starting using the starting handle
1 - Orifice

STARTING USING THE STARTING HANDLE (Fig. 48)

The handle is placed in the boot (trunk).

To use it, open the bonnet and introduce the handle into the orifice (1) of the front grill until it engages in the fan pulley.

Do not forget to keep the handbrake on and to position the gear change lever in neutral).

When the vehicle is fitted with an auxiliary centrifugal clutch, the engine cannot be started by towing or running downhill, whatever gear is engaged. It is impossible to do so, as the clutch, which is disengaged from the transmission when the engine is at a standstill, will not re-engage. Should this procedure be attempted, it could lead to serious mechanical trouble.

TOWING THE CAR

From the front:

Attach a cable to the rings specially provided at the end of the front sidemembers. Use both rings when towing, Never fasten a cable or rope to the bumper.

From the rear:

Attach a cable to the rings provided for this purpose on the rear sidemembers, taking all the precautions necessary to protect the body closing panels.

DOOR LOCKS FROZEN UP

Maintenance:

At the beginning of the cold season, insert into the door-locks a small amount of glycerin or anti-freeze, using an oiler or a dropper.

In case of emergency:


Heat the key slightly with a match flame or lighter before inserting it.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

MISCELLANEOUS INFORMATION

Running-in, servicing, guarantee, running costs, towing a trailer, vehicle identification, replacement parts

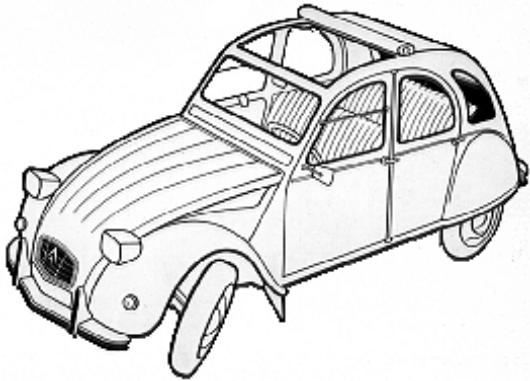

RUNNING-IN

During the first 1,200 miles (2,000 kilometres), avoid over-revving, and do not let the needle reach the coloured marks of the corresponding speed ranges, before changing gear. Also avoid during this period:

- harsh acceleration,
- fierce braking (the brake linings must be run in),
- long journeys at constant speed,
- labouring the engine at too low a speed.

SERVICING AND GUARANTEE

At the time of delivery, you will be given a "Maintenance Guide", with a "Guarantee Card" and a 600 miles (1,000 km) "Servicing Certificate".

On completion of the first 600 miles (1,000 km), any Citroën dealer, whether he supplied the vehicle or not, will service the car, free-of-charge, on presentation of this "Maintenance Guide".

It is particularly important that the oil filter cartridge, which has to comply to the standard regulations, should be of the type recommended by Citroën.

Only the cost of the materials used will be charged for.

The dealer will keep the Servicing Certificate and sign the Guarantee Card.

This card must be signed for you to benefit from the guarantee.

INFLUENCE OF DRIVING TECHNIQUES ON RUNNING COSTS

The manner in which a car is driven affects its running costs, particularly as far as fuel, oil, and tyre expenses are concerned. Running costs increase notably with:

- speed,
- frequent and prolonged use of low gears,
- accelerating and braking too often or too fiercely,
- unnecessary use of the accelerator pedal,
- leaving the choke out,
- taking bends at high speeds,
- tyre inflated to incorrect pressures.

Oil consumption, which varies a great deal with the use of the car, is also influenced when running in the engine, and you are advised to pay particular attention to this point as well as to the oil change

section in the Maintenance Guide.

TOWING A TRAILER

If you intend to tow a caravan or trailer, consult your Citroën dealer first, who will give you all the necessary advice, especially in so far as the legal requirements are concerned.

The maximum towing weights are, in France:

- Trailer without brake: 270 kg (595 lbs)
- Trailer with overrun brake: 400 kg (881 lbs)

IDENTIFICATION

Positions

Manufacturer's plate:	Under the bonnet on the scuttle panel, RH side.
Stamped identification:	On the front part (RH side) or the inner platform.
Engine plate:	On the engine housing, RH side.

Information

On manufacturer's plate:	Type of vehicle Series Number in series of the type Gross Vehicle Weight: (PTC) (in kg) Gross Train Weight: (with trailer) (PTR) (in kg)
Stamped on body:	Type of vehicle Series Number in series of the type
Engine plate:	Make Engine type Production number

In France, the type of car and the number in the series of the type are also indicated on the registration card (grey card) for the French market.

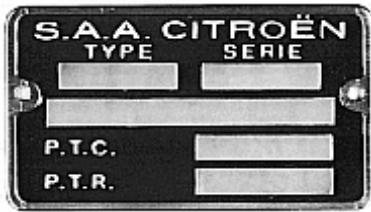


Fig. 49

Manufacturer's plate



Fig. 50

Engine plate



TRAVELLING ABROAD

For English, click [HERE](#)

MERKBLATT FÜR PFLEGE - UND WARTUNGS-DIENST

Reifen:	MICHELIN 125-15 X Druck = 1,4 vorn, 1,8 hinten, 2 Ersatzrad
Kraftstoff:	Super Fassungsvermögen = 20 L
Motoröl:	ÖI TOTAL Altigrade GT 20 W 40 oder GTS 20 W 50 In sehr kalten Ländern: ÖI TOTAL Altigrade GT oder GTS 10 W 30 Fassungsvermögen des Motors: "2 CV 4" = 2,2 L. "2 CV 6" = 2,3 L
Bremsflüssigkeit:	"TOTAL 70 R 3" Fassungsvermögen: 0,5 L
Scheibenwascher:	Wasser, dem man: - zu jeder Jahreszeit ein Produkt wie z.B. "Stop-Clair" -im Winter ein Produkt wie z.B. "Stop- Gel" zusetzten kann
Batterie:	12 V 125/25 Ah. Destilliertes Wasser (keine Säure) zufüllen
Zündkerzen:	AC 42 F - Bosch W 255 T1 - Champion L 85 - Eyquem 755 - Marchal 35 - Marelli CW 7 N BT Elektrodenabstand = 0,65-0,75 mm
Glühlampen:	Siehe Tabelle.

MÉMENTO POUR LA STATION-SERVICE

Pneumatiques:	MICHELIN 125-15 X Pression = 1,4 bar à l'avant, 1,8 bar à l'arrière 2 bars à la roue de secours Autre montes: voir ici .
Carburant:	Capacité du réservoir = 20 litres (Super)
Huile moteur:	Huile TOTAL GT 20 W 40 ou GTS 20 W 50 Dans pays très froids: TOTAL GT 10 W 30 ou GTS 10 W 30 Capacité carter moteur: Sur "2 CV 4" = 2,2 litres Sur "2 CV 6" = 2,3 litres (après échange cartouche filtre à huile: 2,4 litres)
Huile boîte de vitesses:	Huile TOTAL Extrême pression SAE 80 Capacité: 0,9 litre
Graissage général:	TOTAL Multis
Freinage hydraulique:	"TOTAL 70 R 3" Capacité: 0,5 litres
Lave-glace:	Eau à laquelle il peut être ajouté: -en toute saison: un produit genre "Stop-Clair" -en hiver: un produit genre "Stop- Gel"
Batterie	12 V 125/25 Ah. Eau distillée (ne pas ajouter d'acide)
Bougies:	AC 42 F - Bosch W 255 T1 - Champion L 85 - Eyquem 755 - Marchal 35 - Marelli CW 7 N BT Écartement des électrodes: = 0,65 à 0,75 mm
Lampes:	Voir tableau.

PROMEMORIA PER LA STAZIONE DI SERVIZIO

Pneumatici:	MICHELIN 125-15 X Pressioni = 1,4 anteriori, 1,8 posteriori, 2 scorta
Carburante:	Super Capacità = 20 L

MEMENTO PARA LA ESTACION SERVICIO

Olio motore:	TOTAL Altigrade GT 20 W 40 o GTS 20 W 50 Capacità: "2 CV 4" = 2,2 L. "2 CV 6" = 2,3 L
Liquido per freni:	"TOTAL 70 R 3" Capacità: 0,5 litri
Lava cristallo:	Acqua alla quale è possibile aggiungere: -in ogni stagione: un prodotto tipo "Stop-Clair" -in inverno: un prodotto tipo "Stop-Gel"
Batteria:	12 V 125/25 Ah. Acqua distillata (non aggiungere acido)
Candele:	AC 42 F - Bosch W 255 T1 - Champion L 85 - Eyquem 755 - Marchal 35 - Marelli CW 7 N BT Distanza degli elettrodi = 0,65-0,75 mm
Lampade:	<u>Ved. tabella.</u>

Neumaticos:	MICHELIN 125-15 X Presión = 1,4 delantero, 1,8 trasero, 2 auxilio
Combustible:	Super Capacidad = 20 L
Aceite motor:	TOTAL Altigrade GT 20 W 40 o GTS 20 W 50 Capacidad: "2 CV 4" = 2,2 L. "2 CV 6" = 2,3 L
Liquido de frenos:	"TOTAL 70 R 3" Capacidad: 0,5 litros
Lava parabrisa:	Agua en la cual se puede agregar: -en todos tiempos: un producto del tipo "Stop-Clair" -en invierno: un producto del tipo "Stop-Gel"
Bateria:	12 V 125/25 Ah. Agua distilada (nunca agregar ácido)
Bujias:	AC 42 F - Bosch W 255 T1 - Champion L 85 - Eyquem 755 - Marchal 35 - Marelli CW 7 N BT Apertura de los electrodos = 0,65-0,75 mm
Làmparas:	<u>Ver tablero.</u>

Do not forget to ask your insurance company for an International Green Card. This will avoid extra expenses when entering countries where insurance is compulsory and can avoid serious complications in the event of an accident in another country.

However, it is only valid in those countries which are covered by the Insurance policy (look for the geographical limits in the "General Conditions" section of your policy).

In certain countries, a large sum may be required as a deposit in case of an accident causing personal bodily injury. There are insurance policies which cover this risk.



If you are going to a country where the opposite rule of the road applies, first consult your Citroën dealer about dipped headlamps.



[[Contents](#)] [[Notices](#)] [[Important Points](#)] [[Driving](#)] [[Maintenance](#)] [[Minor Repairs](#)] [[Miscellaneous Information](#)]

TECHNICAL SPECIFICATIONS

General

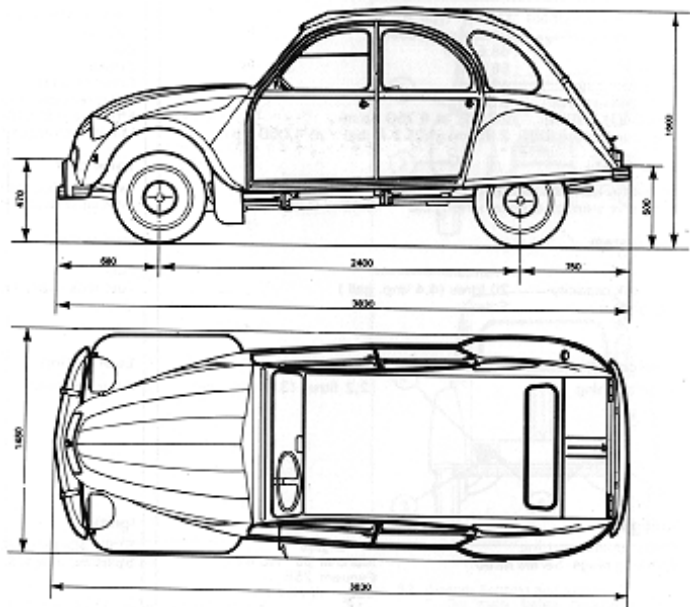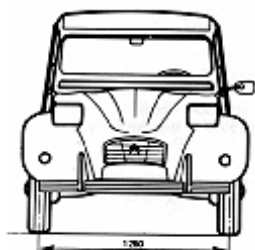

SALOON OR "COMMERCIAL" VERSION

Front Wheel Drive

Number of seats: 4

Fiscal rating: 2 CV on "2 CV 4", 3 CV on "2 CV 6"

Top speed: 64 mph (102 km/h) approx. on "2 CV 4", 68 mph (110 km/h) approx. on "2 CV 6"

Maximum slope for starting with Gross Train Weight: 8:1 (12%)

SPEED AT 1,000 RPM	"2 CV 4"		"2 CV 6"	
	mph	km/h	mph	km/h
1st gear	2.34	3.75	3.13	5.02
2nd gear	4.61	7.35	6.15	9.85
3rd gear	7.65	12.26	9.15	14.65
4th gear	11.00	17.75	12.43	19.89
Reverse	2.34	3.75	3.13	5.02

WEIGHTS	Saloon (Sedan)		"Commercial" version	
	lbs	kg	lbs	kg
Unladen weight, running order -at front -at rear	1234	560	1267	575
	723	328	753	343
	509	232	509	232
Max. authorized laden weight -at front -at rear	1973	895	1973	895
	992	450	992	450

	1102	500	1102	500
Max. towing weight	595	270	595	270
-without overrun brake				
-with continuous brake	881	400	881	400

DIMENSIONS

Fig. 51
Overall dimensions
(in mm).

Overall length: 12 ft 6 ins (3,83 m)
Overall width: 4 ft 10 ins (1,48 m)
Turning circle: 35 ft 1 in (10.70 m) approx.



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)

TECHNICAL SPECIFICATIONS

Engine Specifications

Engine on "2 CV 4"

French official symbol: Citroën type AZ KB
 Cylinders: flat twin opposed
 Bore: 68.5 mm
 Stroke: 59 mm
 Cubic capacity: 435 cc
 Compression ratio: 8.5 : 1
 Effective HP (DIN): 24 HP at 6,750 rpm
 Maximum torque (DIN): 2.95 mkg (21.3 ft.lbs.) at 4,000 rpm

Valve gear:

Exhaust valve stem clearance, when cold: 0,15 to 0,20 mm
 Inlet valve stem clearance, when cold: 0,15 to 0,20 mm

Fuel system:

Fuel: Premium
 Fuel tank capacity: 20 litres (4.4 imp. gal.)
 Carburettor: Solex

Lubrication:

After draining: 2,2 litres (3.9 imp. pints)

Ignition:

Static advance setting: 12° engine
 Sparking plugs: *Series fitted:* Marchal 35 - AC 42 F - Eyquem
 755 - Bosch W 225 T1 - Champion L 85 - Marelli CW 7 N BT
 Electrode gap: 0,65 to 0,75 mm (0.026" to 0.030")

ELECTRICAL SYSTEM

Voltage: 12 V

Alternator: Maximum power: 390 W; Minimum charging speed:
 780 rpm
 Battery: Capacity: 125/25 Ah. CEI or 150/30 Ah. CEI

Engine on "2 CV 6"

French official symbol: Citroën type AZ KA
 Cylinders: flat twin opposed
 Bore: 74 mm
 Stroke: 70 mm
 Cubic capacity: 602 cc
 Compression ratio: 8.5 : 1
 Effective HP (DIN): 26 HP at 5,500 rpm
 Maximum torque (DIN): 3.8 mkg (27.5 ft.lbs.) at 3,500 rpm

Valve gear:

Exhaust valve stem clearance, when cold: 0,15 to 0,20 mm
 Inlet valve stem clearance, when cold: 0,15 to 0,20 mm

Fuel system:

Fuel: Premium
 Fuel tank capacity: 20 litres (4.4 imp. gal.)
 Carburettor: Solex

Lubrication:

After draining: 2,3 litres (4.0 imp. pints)

Ignition:

Static advance setting: 8° engine
 Sparking plugs: *Series fitted:* Marchal 35 - AC 42 F - Eyquem
 755 - Bosch W 225 T1 - Champion L 85 - Marelli CW 7 N BT
 Electrode gap: 0,65 to 0,75 mm (0.026" to 0.030")

Gear Ratio

On:	"2 CV 4"		"2 CV 6"	
1st gear	0.0348	29:1	0.0465	21.5:1
2nd gear	0.0681	15:1	0.0912	10.96:1
3rd gear	0.1136	8.1:1	0.1357	7.37:1
4th gear	0.1644	6:1	0.1842	5.43:1
Reverse	0.0348	29:1	0.0465	21.5:1

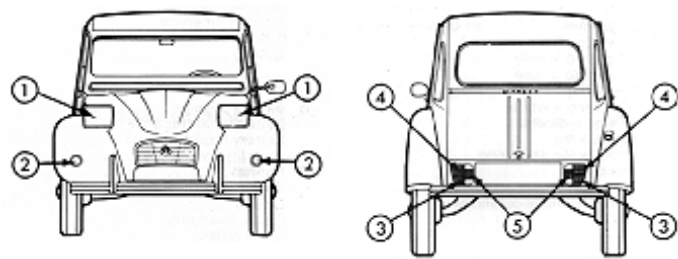


Fig. 52

Exterior lighting and signals

- 1 - Dip/main beam headlamps and front sidelamps
- 2 - Front direction indicators
- 3 - Rear direction indicators
- 4 - Brake lamps
- 5 - Rear number plate lighting and tail lamps

Crownwheel and pinion	8/33	8/33
Bulb table		
12 V 45/40 W type "European Dip"	Dip/Main beam headlamps	
12 V 4 W - BA 9 S type T 8/4	Front sidelamps	
12 V 5 W type R 19/5	Rear sidelamps and number plate lighting	
12 V 21 W type P 25/1	Front and rear direction indicators - brake lamps	
12 V 7 W type BA 15 S	Interior lamp	
12 V 2 W - BA 9 S type T 8/2	Speedometer lighting	

Replacement parts

Every genuine CITROËN replacement part is sold only through the company's network of dealers.

It is in the interest of the user, for his own safety and for the guarantee, to refuse any other part.

In effect, the fitting of parts or units of different origin could involve him in legal liability if such fitting caused a vehicle to fail to conform to legal requirements of the country concerned, particularly as regards SAFETY, ANTI-POLLUTION, IGNITION INTERFERENCE SUPPRESSION, and NOISE LEVEL.

Furthermore, such fitting would remove from the user any possibility of recourse against the manufacturer.

In particular, items concerned are:

- components of braking systems,
- components of lighting and signalling systems,
- engine components,
- exhaust components,
- steering components,
- structural items,
- suspension components.



REMINDER FOR SERVICE-STATION

For German, French, Italian, or Spanish, click [HERE](#).

REMINDER FOR SERVICE-STATION	
Tyres:	MICHELIN 125-15 X Pressure = 1.4 bar (20 psi) at the front 1.8 bar (26 psi) at the rear 2 bars (29 psi) on spare wheel Other fittings: See HERE .
Fuel:	Super (Premium 4-stars, 97-99 octane) Capacity: 20 litres (4.5 imp. pints)
Engine oil:	TOTAL "GT 20 W 40" or "GTS 20 W 50" oil In very cold countries: TOTAL "GT 10 W 30" or "GTS 10 W 30" oil
Sump capacity:	On "2 CV 4" = 2.2 Litres (3.9 imp. pints) On "2 CV 6" = 2.3 Litres (4 imp. pints)
Gearbox oil:	TOTAL extreme pressure "SAE 80" oil (capacity 0.9 litre (1 1/2 Imp. pints)
General lubricant:	"TOTAL Multis"
Hydraulic brake system:	TOTAL FLUID "70 R3" - If this product is not available, use NFR12640 "S" or "V" or SAE J 1703a (capacity 0.5 Litres - 7/8 imp. pint)
Windscreen washer:	Water, to which may be added: - in any season: a product like "Stop-Clair", "Clearalex", "Screen-Clear". etc. -in Winter: a product like "Stop-Gel"
Battery:	12 V - 125/25 Ah. CEI (or 150/30 Ah. CEI) Distilled water (do not add acid)
Sparkling Plugs:	AC 42 F - Bosch W 255 T1 - Champion L 85 - Eyquem 755 - Marchal 35 - Marelli CW 7 N BT Electrode gap = 0.65-0.75 mm
Bulbs:	See table.

PRE-START CHECKLIST

Levels

Petrol
Engine oil
Brake fluid
Battery
Windscreen washer

Operation

Engine Oil warning Lamp (2 CV 6)
Horn
Exterior lighting
Direction indicators
Brake lamps

Diverse

Correct setting of rear-view mirrors
Tyre pressure
Front grill muff
Seat belts
Adjustment of seats



[\[Contents\]](#) [\[Notices\]](#) [\[Important Points\]](#) [\[Driving\]](#) [\[Maintenance\]](#) [\[Minor Repairs\]](#) [\[Miscellaneous Information\]](#)